

Section 8A

Seats/Fenders



NOS FLT Classic Rear Fender

- Stock with primed finish
- Replaces 59579-79 on 1980-81 FLT

88040



Raw Lower Frame Fender Bracket

- Weld-on rear lower frame bracket for restoration or repair
- Fits EL 1936-52 and 1941-57 FL

73605



Corbin-Gentry Seats 2-6

Fender Struts 22-23

Fender Trim 24-27

FLH Seats 6

Fenders

Front 12-16

Rear 17-21

Luggage Racks 28

Sissy Bars 10-11

Sissy Bar Pads 10

Solo Seats 3-5

Spring and Brackets 7-10



Bobbed Rear Fender for Rigid Paughco USA

Pre-cut and rounded bobbed fender for the look of the 40's and 50's. Rear struts have chain guard mount in place. With left side cutout for stock 1936-57 BT rigids and Paughco replacement rigid frames.

88054

Saddles



XL Custom Button Seat

96057 Black seat for 1960-70's frames



Frame Mount Solo Seat

Black vinyl cover. Fits FX 71-84 and FL 58-84.
96014

Knob & Bracket Kit

Attaches rear of seat on FX-FL models. Allows removal of seat without going under fender with wrench.

1996 Kit



Rear Seat Bracket

Chrome replaces 52538-72 on FX-FXE 1972-84. Can be mounted to any metal base seat.

16217



Hustler Seats XL 1952-78

Black naugahyde saddle seat with yellow flame design stitching and sewn flame inlay in rear pad area.

96076

Special Order Only- please allow additional time for delivery.



Black Button Set

Set of six with clips, for repairing or installing on custom seats.

1999



Corbin-Gentry Solo Seat Kits



K Model Style FL Solo Seat Kit

Includes leather seat and mount kit for 1965-84 FL-FXE.
59850



Black Solo Seat

Fits BT and XL rigid frames.
Includes mount kit with hair pin
springs included. Solo measures
14" x 13"

PCP	Description
96058	Seat kit
59958	Mount kit only



Mini Seat Mount Shock

For use with solo seat mount kits. Measures 4" long C/C of alloy
mount ends and has 5/16" mounting holes.
27032



XL Leather Solo Seat Kits

Kit includes K model seat, chrome 2" springs and mount hardware.

PCP	Years
96041	1952-78
96042	1979-81
96043	1982-03

Corbin-Gentry



96046



96048

Metro Solo Seats

Genuine black leather seats on a stock formed steel ribbed baseplate with a rolled and sewn edge; and custom styled black leather skirt.

PCP Skirt Design

96046 Police with side spears and rectangles on rear

96048 Chrome spots with fringe



6638



6637

Chopper Solo Seats

Smaller version in black or white vinyl. Includes nose bracket, accepts seat springs. 9 inches wide, 12-1/2 inches long.

6637 Black

Imported Pillion Pad

Black vinyl, measures 4-1/4 inches wide by 8-1/2 inches long.

6638 Black



Replica K Model Solo Seat

Genuine leather seat is constructed like original style with a rolled sewn edge with riveted under strip and mounted on a stock style, formed steel, ribbed baseplate. Replaces OEM 52000-40. Seat will bolt to any seat 'T' as a custom or stock replacement. Seat measures 16" L x 13" W and rear bolt holes are 6 5/8" c/c.

96031



Black Vinyl Solo Seat Set by Corbin-Gentry

Black naugahyde seat features classic 3 button styling and a metal baseplate. Solo seat measures 12" x 12" and has threaded inserts to accept bolts or studs to mount springs and nose bracket. Pad measures 7" x 11" and mounts by 5/16" bolts on the underside. Mount kit is sold separately.

PCP Item

96039 Seat and pad set

6636 Solo seat only



96028

Corbin-Gentry 1925 Standard Style Solo Seat

This seat features genuine leather with an OEM style steel-ribbed base plate. Seams are finished by riveting a strip to seat pan, and then form fitting the covering to the strip for an authentic look.

96028 Black

96029 Brown (52004-25)



Replica Thin Style Solo Seat

Black leather seat features rolled sewn edge with a black rivet strip. Vented steel base plate accepts T-bar type mounting system. Order mount bar and hardware separately. Fits FL 1941-84.

96020

Solo Seat



1948 Style Replica Leather Solo Seat

All leather seat with steel ribbed baseplate features an original style Royale skirt with yellow and green vinyl rosettes.
96037



Deluxe Leather Solo Seat

Seat features a leather skirt adorned with rosettes.
96036 White leather with blue rosettes



Early Deluxe leather Solo Seat

Seat features original style leather skirt adorned with spots and red and tan rosettes. Replaces 52006-47.
96033 Black leather



Deluxe Solo Seat

Complete as shown with leather fringed skirt. Seat is all leather on OEM type ribbed steel base plate, and decorated with red rosettes and spots on black seats and white features blue rosettes with spots. Fits EL 1936-40, FL 1941-84, WL 1929-52 and UL 1937-48.

96025 Black deluxe w/fringe

96026 White deluxe w/fringe



Police Style Black Solo Seat with Spears

Black leather solo seat with steel ribbed baseplate. Fits EL 36-40, FL 41-84, WL 29-52, VL 30-36, UL 37-48, G 37-72.
96059



Deluxe Solo Seat with Skirt

Black leather seat with skirt, orange rosettes and nickel spots. Accepts stock T-bar mount, sold separately. Fits WL 29-52, VL 30-36, EL 36-40, UL 37-48, G 37-72 and FL 41-84.
96065

Corbin-Gentry Buddy Seats

96163




Original 1940's Replica Buddy Seat

Corbin-Gentry seat features stamped and formed steel OEM type base plate with all brackets riveted in place. Foam is molded in a smooth contour and covered by top grade USA cowhide, featuring factory seams. Seat is accessorized with a rosette. Accepts #6510 chrome hand rail.


PCP Description

- 96163** Black vinyl with 3 piece skirt
- 96165** Black leather seat without skirt
- 96166** Brown leather seat without skirt
- 19037** Handle set (pair) (52547-33)

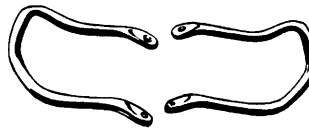

Chrome Buddy Seat Handles.

Replaces OEM 52547-33.
19037 Sold in pairs.

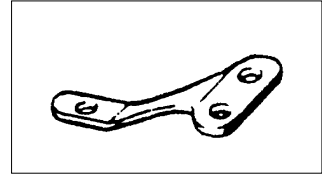

Front Nose Bracket

Bracket is required to mount all Buddy seats to stock seat "T's". Sold each.
5537 52551-36



Replica of Original Hand Rail For Buddy or Heritage Seats 1949-73

6510 Chrome (91575-49)



Early Style Thin Buddy Seat by Corbin-Gentry

Original style seat measures 24" L x 16" W and features black leather on an OEM style ribbed baseplate with bracket riveted in place. Cobbler seat has a sanded, stitched edge. Replaces 52503-36.


PCP Description

- 96169** Thin Buddy with cobbler edge 1930-36

Seat Rail Mount Kit


Mount kit allows attachment of PCP#6510 handrail, to seat T bar PC#4909 or OEM style (#54001,54002) when fitted with leather police style solo saddles with or without skirts.

27056

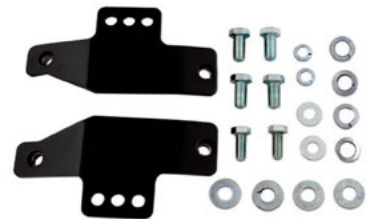


FLH Seat Bracket

Attaches frame mount seat to 1958-85 FLH models. Bolts to stock fenders 1977-84. Zinc.
27079

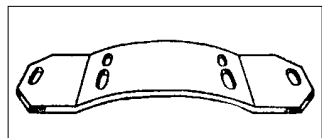


Seat Hardware

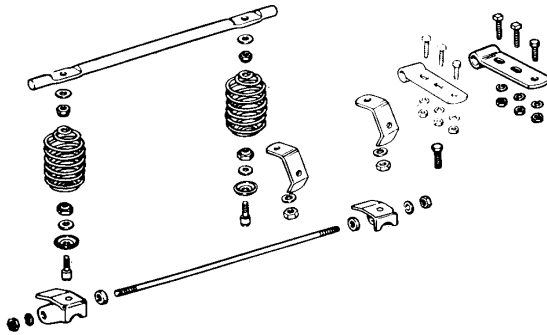

Auxiliary Spring Kit for FL 1965-84

This kit adapts to the plunger mounted buddy seats for extra weight carrying capacity. Includes all parts pictured to fit 1965-84 FL frames and are all zinc plated.


19822 Kit

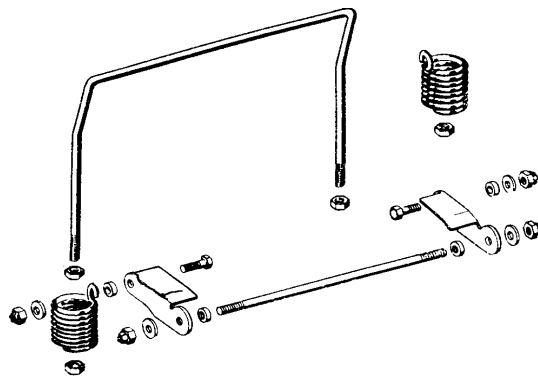

Auxiliary Spring Kit for Big Twin 1958-64

Includes all parts pictured finished in zinc. Seat clip kit #19036 must be ordered separately.

19821 Complete kit

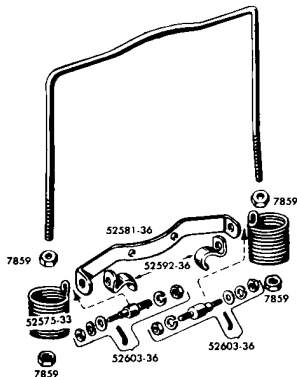

Auxiliary Spring Kit Assembly for BT 37-57

Includes all parts pictured for Big Twin 1937-57 rigid frames. Replaces 52560-36. All parts zinc plated on BT and black on 1933-52 45 solo model.

- 19819** 45 Solo 1933-52 (52562-33)
- 19820** BT 1936-57 (52560-36)
- 13052** Black springs (52575-33) (pair)
- 13053** As above, chrome



Saddle Stud, Nut & Spacer Kit

Includes 6 seat height adjustment spacers, studs and nuts for solos and buddy seats.

19069 Cad kit (18 pcs)



5291



5537



1163

Buddy Seat Hardware

- 5291** 51918-29 Clevis pin & spring 1929-on (parkerized)
- 13099** 51920-29 Spring for clevis pin only
- 5537** 52551-36 Front bracket 1936-76 FL
- 1163** 52586-36 Seat spring hook 1936-64 FL



Seat Posts

74-80 & 45 models completely assembled with springs and hardware. Top clevis and spring are sold separately. **Note:** use #82005, post dia. 1.060" on late FX-FL models 1980-84 which do not have casting machined to accept the bushing dia. of #82007 and #82008 which is 1.180".

PCP Model

- 82005** All 45's 1930-73, black (51602-30)
- 82007** BT 1936-80, black (51610-58)
- 82008** As above, chrome
- 13120** 74 Lower spring set (51770-29) (3pcs)
- 13157** Recoil spring only (51777-30)
- 82009** BT seat post inner rod with spacer (51661-36)
- 5291** Parkerized top clevis pin and spring kit (51918-29, 51920-29)
- 5537** Front nose bracket to mount buddy seat t-bar (52551-36)
- 21502** Cadmium lower nut kit (51674-25)
- 9691** As above, parkerized

Seat Post Nut Kit

Nut replaces 51674-25, with lock-washer for 1925-81 all Twins with seat post.


- 21502** Cad kit
- 9691** Parkerized kit



Seat Post Bushings

Bronze for 74 & 45 models. Each.

- | PCP | OEM | Type |
|--------------|----------|-----------------|
| 18615 | 47581-29 | 1929-73 45 |
| 18616 | 47583-36 | 1936-57 74 & 80 |
| 18584 | 47094-58 | 1958-84 74 & 80 |

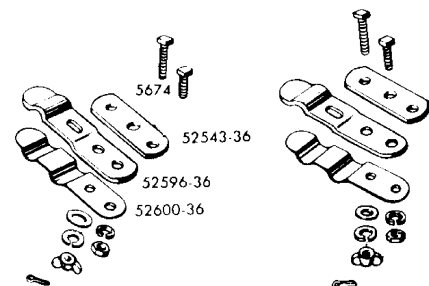


Auxiliary Spring Clip Kit

Includes 2 of each part listed 52600-36, 52596-36, 52543-36, with bolts and wing nuts for clipping spring yoke to bottom of buddy seats.

19036 Kit

Solo Seat • Mounting Brackets

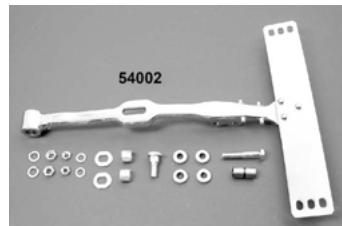


Replica Forged Steel Seat "T"

Features original construction and shape for the authentic look. Two stage front bushing included. 1936-64 models include a 5/16" bolt and 1965-80 models include a 3/8" bolt.

PCP	Application	Finish
54000	1930-46 45	Black
54003	1930-46 45	Chrome
54004	1938-39 BT	Black
54005	1936-64 BT & 45	Black
54006	1936-64 BT & 45	Chrome
54001	1965-80 BT	Black
54002	1965-80 BT	Chrome
54010	1965-80 BT	Black, bar only

Note: Seat 'T' components are compatible with seat spring posts as fitted to 1930-80 model Big Twins and 45 models. Big Twins 1930-80 are machined to fit a seat post bushing and a seat post

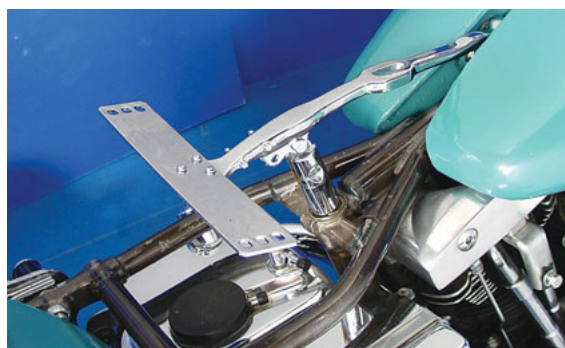

Replica Seat Post and "T" Set

Includes fully assembled seat post, replica forged steel seat "T" and related hardware. Cad kits include heavy duty cad plated post assembly with black "T".


Chrome	Black	Cad	Application
82116	82117	82121	1936-64 BT
82118	82119	82122	1965-80 BT
-	82120	-	1929-73 45



Solo Seat Shock Kit

Includes 4" alloy shocks with adjuster rings and frame clamps for use on frames with 1" cross member on rear part of frame. Some applications may require additional hardware that is not included in kit. Fits FL 41-57 rigid frames and FL 58-84 swingarm frames.



27397

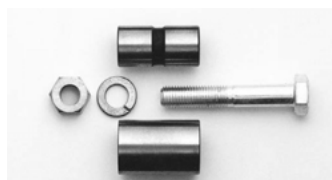

Seat "T"

Used to mount all police and Heritage buddy seats to 74 & 80 models 1936-84, and 45 models 1929-73, equipped with seat posts. Fabricated from square solid steel. Includes stock 2 stage bushing.

PCP	OEM	Item
4909	51900-30	Custom seat T bar for police seat
18589	51925-37	Bushing kit 37-64 (Colony)
18648	51925-37	Bushing only 37-64 (Pr)
18590	51925-65	Bushing set 65-80

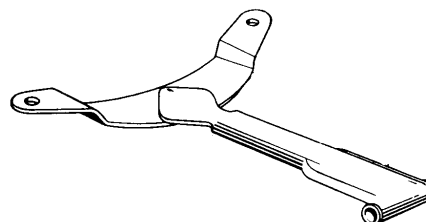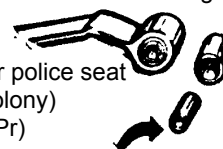

K-Model Type Seat T

Precision stamped and formed seat T for mounting our K-model or D series saddles. Early XL and 1936-on Big Twins.

4205 1952-78 XL




Chrome 3 & 5 Inch Seat Springs

For rigid frame solo mounting.

2255	3" set
2256	5" set


Solo Seat • Mounting Brackets

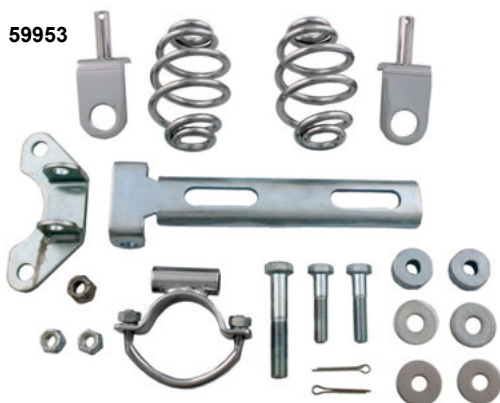

59952




59957

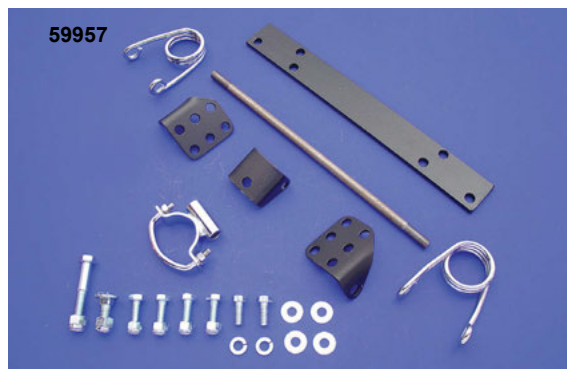

Solo Seat Mount Kits

Includes nose bracket, chrome springs, and rear brackets to mount small type solos. To mount larger Police seats, purchase cross bar separately.

PCP	Spring	Type	Application
59952	3"	Coil	Rigid
59953	3"	Coil	1973-84 FX, 1958-84 FL
59957	2"	Hair pin	1973-84 FX
59958	2"	Hair pin	Rigid



Spring Plate

This bar mounts to old style Sportster solo seat and allows springs to be used.


19557



1958-84 BT Solo Rigid Mount Kit

Will allow mounting of Police style solo seat to swing arm frame.


59942 Rigid mount kit

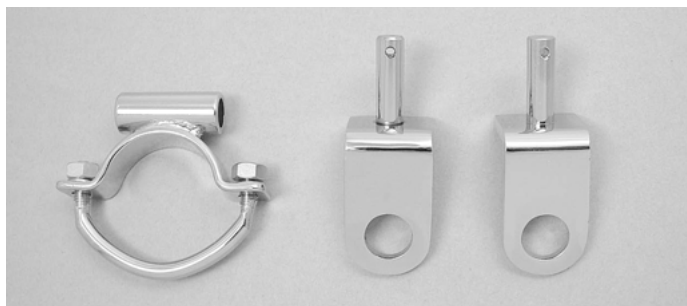

Chrome FX-FL Spring Mount Kit

Includes mounts for spring perch which attach to top shock studs and front clamp for nose bracket. Fits 1958-84.

PCP	Type
2259	Complete kit
73717	Front U clamp only

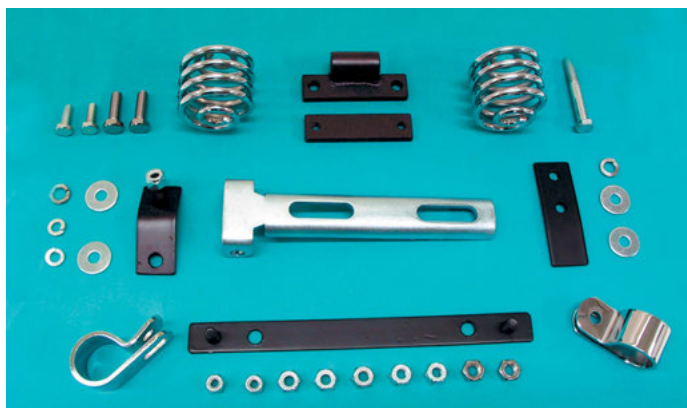

XL Solo Hardware Mount Kits

Kits include nose bracket, 2" springs, and rear bracket. To mount larger type police solos the additional purchase of a cross bar is required.


PCP	Application
59510	1952-78
59511	1979-81
59512	1982-03

Seat Hardware



Chrome Universal Tilt-Up Nose Bracket

- 3703** Fits through backbone of frame, 1-3/4" O.D. For mounting solo seats to most frames.
- 2823** Fits through custom mount spacer (welded to top of frame)

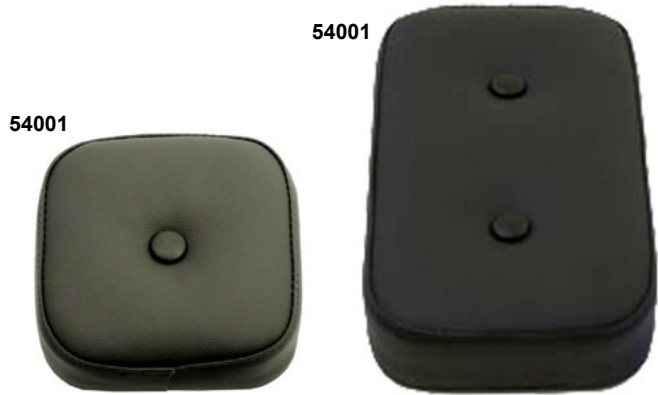

Button Sissy Bar Pads

These pads will mount to stock sissy bars, single for shorter bars and the 2 button style for taller bars. Mounting brackets are included.

- 4521** Pillow pad 5" tall. Fits our 14" Sissy Bar.
- 4522** Pillow pad 10" tall. Fits our 19" Sissy Bar
- 4523** Smooth original style pad



Universal Solo Seat Front Mount

Includes mount and tilt-up seat bracket to fit most solo seats. Lower bracket is direct bolt on to 1965-84 FX, FLH frames.

27616



Solo Seat Mounting Brackets



- Chrome mounting brackets for solo seats as pictured.
- 2257** Big Twin Rigid using solo seat/springs (bar only)
- 2258** 1957-78 XL rear solo springs support bar
- Note: only hardware pictured is supplied**



Sissy Bar Luggage Rack

Made of solid steel and then chrome plated. Fits 16" tall sissy bars. This unique design allows for easy installation or removal.

27159

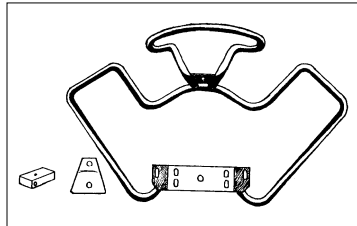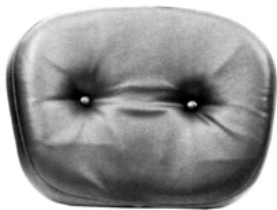

Passenger Pad

Fit stock seat rails on 1977-89 FLH, FLT, FLHT. Pillow style naugahyde to match factory style seats. Includes clamp, 13" tall. Passenger pads will fit seat rail shown.

- 96501** Pillow
- 51901** Hand rail fits only FLH 1977-84 (91582-79)


Bolt-On Sissy Bars



Solid Sissy Bars

Solid steel, 9/16 square for models listed. 19" model will accept taller pad #4522.

For 12" Bars	For 19" Bars	Width (Inches)	Year Model
1217		8-3/16	FX-FXE 1973-84
1220		7-1/4	XL-XLH 1957-78
1228	1237	8-3/16	XLS-XLH 1979-89
6470		8"	XLS-XLH 1979-93 (signal notch)
4955		8-3/4	FXWG 1980-96

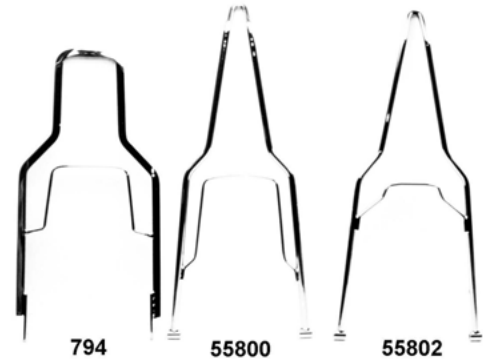

Rigid Frame Sissy Bars

Manufactured from 9/16" square steel then polished and chrome plated. Designed for Fatbob or 5" & 6" steel fenders.

Note: height is measured from bottom of bar to the top.

PCP	Style	Type	Height	Stock
794	Square top	Fatbob	23"	Square
55800	Tilt top	Fatbob	28"	Round
55802	Pointed top	Flat	26"	Round

Note: Tire to fender clearance must be checked.



Round Sissy Bar by Paughco

These bars measure 1/2" round are 24" tall and 10" wide at the bottom for belt or chain applications.

55803	Bobbed
55804	Flat fenders, 5" and 6"

Separate Sissy Bar Side Straps and Backs

Application	Sissy Bar Back Width	Side Straps	Hiboy 16" Back	Lowboy 11" Back	Shorty Hand Rail
FXWG 80-86	8-3/4"	55830	55843	55847	55851
FX, FXE 72-85	8"	55836	55845	55849	
FL, FLH 58-84	8-5/8"	55837	55843	55847	55851
FXR 85-94	6-3/4"	55838	55844	55848	
XL 79-93	8"	55840	55845	55849	
XL 57-78	7-3/8"	55842	55846	55850	

Front Fenders



Narrow Front Fender for FL Models

Custom, unpainted steel narrow FXWG-style front fender for all 1949 to 1984 4-speed FL model front forks. Complete with chromed integral mounting brackets, the fender profile is designed to clear 18", 19" and 21" tires.

6091 Unpainted w/chrome brackets

88211 As above w/ raw brackets



88222

Late FLH Front Fender 1979-84

Front FLH & FLT stock replacement fender. Has trim holes and hole dimple in front for light.

88222 1979-84 FLH fender tip indent and trim holes (59093-79)



6095

Front Fender for FL 4-Speed Models 1958-84

A reproduction of the 1958-84 4-speed dresser front fender with rolled edges and structural reinforcement. #6095 will also fit FLT and FLHT models when trim holes are drilled.

6095 FL 1958-84 no trim holes (unpainted)

88022 FL 1958-84 with trim holes (not primed)

88201 1949-57 Early, raw (59000-48A)

27286 1958-84 Bracket set only



88202

88208

Steel Front Fender For the Fat Boy Look


Fits most FL and FXWG models when a 16" wheel is used.

PCP Application

88213 FLT 1980-on

88208 FXWG 1980-99

88202 FLH 1949-84 (no primer)

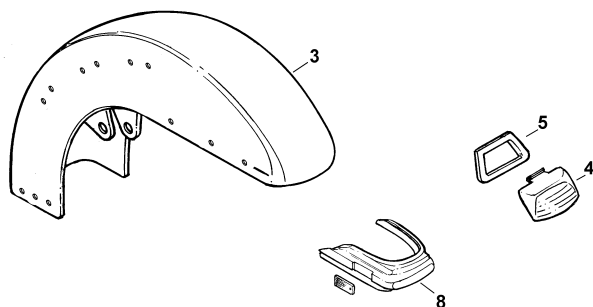

Front Fender & Trims

PCP	OEM	Description
3	66903	59101-79A Fender prime 79-80 FL
4	29511	59180-80 Lamp lens 1980-on
5	25192	59181-80 Lamp gasket 1980-on
8	29631	91107-77 Bumper only 1977-on FL



Glide Front Fender 1949-57

Raw fender features early type riveted brackets.

88201 59000-48A

27282 Bracket set for above

Front Fenders



Narrow Front Fender for Wide Glide®

A trim, tire-hugging fender complete with chrome brackets, ready to paint. A reproduction of the Original Equipment front fender to fit all FXWG 1980-86 (OEM 59924-80)

6088 Unpainted

6089 Chrome



FL-Style Fender for FXWG

Custom application for narrow 21" tire. If trim is desired, mounting holes must be drilled and trim is available separately.

88200 Unpainted



Custom Wideglide Fender Mounting Kit

16218



6072



6071

NOTE!!! THESE DO NOT FIT WITH 16" TIRES

Spring Fork Style Fenders for 19" Tires

Classic springer style 5" wide for 19" wheels for most models. Give a classic look to the new machines. Assembled using rivets.

PCP Application

6071* FX 1973-85, FXR 1982-90, XL 1973-90

6072* FL models 1949-on

*Note: These numbers are supplied with chrome braces.



FXWG Glide Type Fender 1980-on

88221 59924-80

Note: Always install fenders for proper fitting before painting.

Front Fenders



Sportster Stock Style Early Front Fender

Plain finish fits 1957-69.

6090 59007-52



Stock Type Front Fender

Replacement fender comes with chrome brackets and rivets to fit 1973-99 FX-XL-FXR. (not assembled)

6093 Fender 1970-94 (59007-73B)

1936 Bracket set only (59111-74)



Replica Raw Steel Front Fender

Raw steel fender is assembled with right side cable bracket. Fits 1973-84 FX, 1973-89 XL, 1982-94 FXR

88207 59007-73B



Custom Shortened Front Fender

Shortened version of #6093. Fender with chrome brackets comes unassembled.

6094 Fits FX 73-84, FXR 82-94, XL 73-89



Narrow Front Fender

Custom front fender for all FX, FXR and Sportster® models with 35mm or 39mm front forks from 1973-02. Unpainted, and complete with assembled chrome or plain brackets. Use with 18", 19" or 21" rims.

PC **Description**

6009 Unpainted with chrome brackets (59031-83)

88210 Unpainted with plain brackets (59007-86)



Narrow Raw Front Fender

Short style narrow front fender with riveted bracket for use with 35mm and 39mm glides. 4-½" width with braces. Fits 1983-on XL.

88214 59712-07



Ribbed Front Fender with Bracket

Ribbed fender with chrome bracket for use on 35mm and 39mm forks. Can be used on 18", 19" or 21" rims. Fits 1980-85 FXWG.

PCP **Description**

88085 Chrome fender with chrome bracket

88086 Raw fender with chrome bracket



Stock type Front Fender Braces

Chrome plated tubular style fender brace set. Replaces OEM 59111-74. Use on all OEM front fenders 1974-82 and all replacement fenders. Sold in pairs only.

1936 Full size brackets

Front Fenders



6098

Springer Front Fender for Big Twins

Accurate, faithful reproduction of the original fender. Complete with braces and fender edge "reveal". For all 61", 74" and 80" Big Twins 1941 thru 1948.


6098 OEM 59012-40



88205



88206

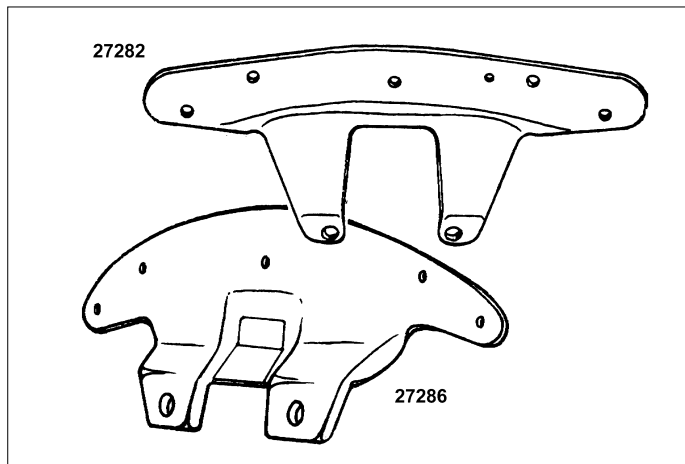

27282

27286

Spring Fork Front Fenders

Are full width 7-1/2" for 16" or 18" wheels with riveted on braces. 45 type fits with rockers inside the forks. BT fits with outside rockers.

PCP Application

88205 BT 1936-46, replica w/thin braces

88206 BT 1947-48, replica w/thick braces (59000-36)

27285 Lower brace set BT 1936-48 (59135-36)

4501 Stainless steel trim for above

Glide Fender Brackets

Use to repair braces on 1948-84 FLH fenders or for mounting on custom 7" wide fenders.

PCP Fits

27286 1958-84 style

27282 1949-57 style



Front Fender Lamp Wire Kit

Steel tube, clamps, nuts, connectors, wire and loom will secure wire to fender as original. Duplicate of OEM H-D kit fits 1935-47 all models. Instruction included.

9786



9742



2179



9680

Front Fender Mounting Kit


Reproduction of stock Harley hardware used to install stock fenders.

Chr.	Cad	Parker.	Description
9742	2179	9680	Springers 1936-48
-	-	5162	Locks only

Frames - Fenders - Tanks

We suggest pre-fitting all component parts including engine and transmission assemblies before painting or final assembly of a frame, fender or tank.


Fender Mounts

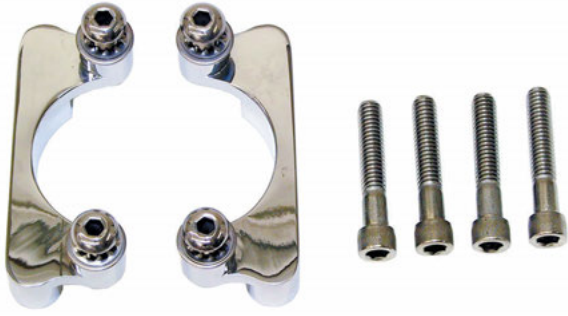

Conversion Fender Spacer Kit

This chromed fender spacer kit includes hardware to allow the use of any stock narrow glide fender on a 41mm Wide-Glide front fork. Spacers bolt to the slider assembly.

43120

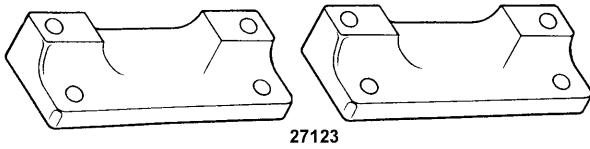

Fender Adaptor Brackets

Allows the installation of a narrower Fat Kid (FLST style) front fender on 1980-99 FLT-FLHT with 16" front wheels.

PCP	Finish
27123	Alloy
27354	Billet

Rubber Washers

Use to mount accessories to fender.
20 Pack.

23059	1/4"
23060	5/16"



Flat Washers

For mounting fenders and rails. Measures 1-1/4" diameter with a 5/16" bolt hole.


20505 10 pack



Rigid Frame Fender Clamps BT 1936-57

Rigid frame fender U-clamps mount fender to frame behind battery.

19665	Parkerized clamps only (no bolts) (pair)
19329	Parkerized clamp only (each)

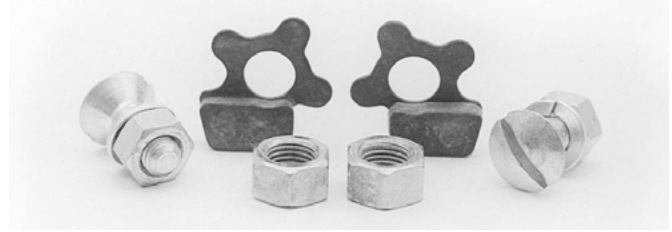

Front Fender Mounting Kit

Reproduction of stock Harley hardware used to install stock fenders.

Chr.	Zinc	Description
24073	-	FXWG 1980-93
-	24075	FLH 1949-84
-	24076	FL locktabs only 1974-84



Front Fender Mounting Kit

Correctly reproduced locktabs and bolts used to mount front fender on 1951-78 FL, FLH

PCP	Finish
72290	Parkerized
72291	Cadmium
72292	Chrome

Rear Fender Mounting Kit

Colony reproduction of stock hardware used to mount rear fender.

Chr.	Cad	Parker.	Application
9708	1793	9707	BT 1936-57



Rear Fender Frame Clamp Bolt Kit

Parkerized OEM 59802-47 and 4004 bolts, nuts and washers used on 1936-57 BT.

72493

Rear Fenders




Raw Rigid Rear Fender FL 36-48

Fender is fully assembled and riveted together with hinge and drilled for the U-clamps. Features relief over skirts to accept stainless fender trim attached by clips. Fender is 7- $\frac{1}{2}$ " wide with $\frac{3}{4}$ " brackets and does not have a tail lamp hole. Fits EL 1939-52, FL 1941-54 and will fit BT 49-57 Rigid.

88000 Preston

88057 Paughco

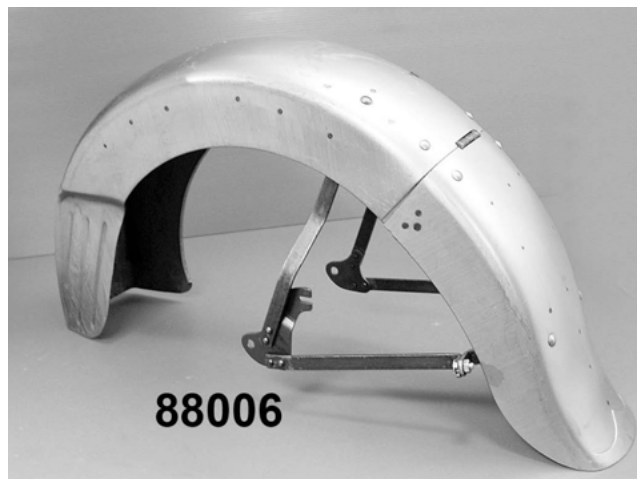

Replica Rigid Rear Fender

Fender is fully assembled and riveted together with hinge. Features a 1949-50 style chain relief cutout. Fits EL and FL 1949-51 models.

88006



Rigid Rear Fender Assembly

Fully assembled, riveted fender with $\frac{3}{4}$ " wide braces and hinge. Features two piece spot welded skirt. Fender may require a slight adjustment on the hinge area and rear portion before primer and paint. Fits EL 61" 1947-48, FL 74" 1947-48 and UL 74" and 80" 1947-48.

88004



Rigid Rear Fender

Fender has 7/8" wide bracket and does not have a tail lamp hole. Features a 1951-57 style chain relief cutout and accepts stainless fender trim attached by clips. Fits FL 1955-57.

6029



Raw Rigid Rear Fender

Fender with 5/8" wide braces and hinged tail section. May require metal work for alignment and fit before primer and paint. Fits BT 36-48. Replaces 59604-39.

88002




Bobbed Rear Fender for Rigid Models

Fender is 7-3/8" wide and includes brackets. Inside width of fender braces is 8-1/4". Fits EL 1936-52, FL 1941-57, and UL 1937-48.

88001

Rear Fender

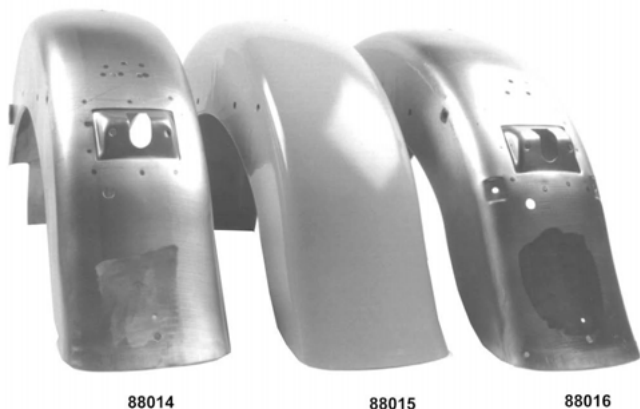


FL One-Piece Rear Fenders for 1958-84

These fenders are reproductions of the one-piece rear fenders as used on FL 1980-84 4 speeds. They're available in three versions, #88015 smooth with no taillight or turn signal mounts (your choice of tail lights), #88014 has the 1973-on taillight mount (no turn signal mounts) and #88016 as stock. Fender strut mounting holes are as OEM. Fenders are shipped with a raw finish ready for painting.

PCP Description

- 88015** With no taillight mount or trim holes
88014 With tail light mount, but no signal mounts (great for fender rail lights)
88016 Stock replacement (59601-79B)

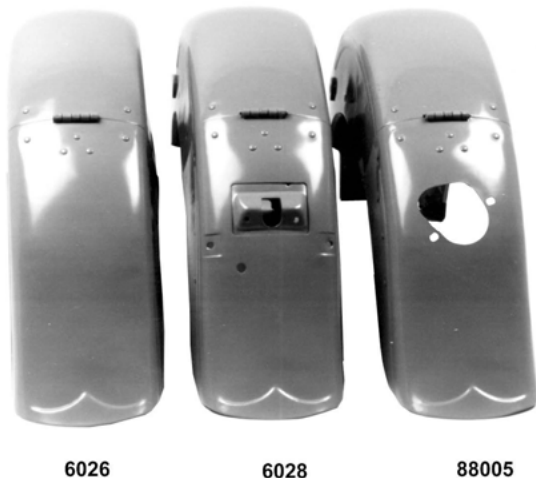


FL Hinged Rear Fenders

These hinged fenders will fit all FL 4 speeds 1958-84. Two versions available, one smooth with no taillight mount (your choice of tail lights), and the other has the 1973-on mount. They will also fit FX models if FL struts are used and can be adapted to FXWGs. A dent must be made in the front right lower corner of the fender to clear the FXE battery box.

PCP Description

- 6026** With no tail light mount 1958-78 (59604-65A)
6028 With tail light mount 1973-84 (59604-69C)
88005 With tail light mount 1958-72(68010-64B)

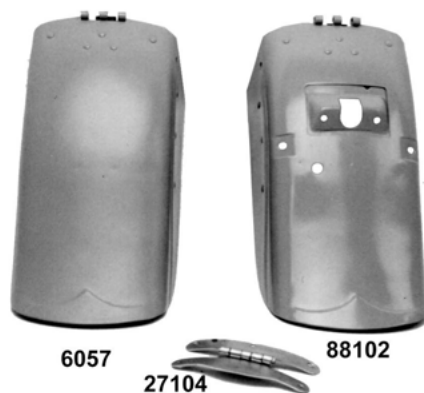

Rear Fender Tail Gate


PCP	OEM	Description
6057	—	FLH Rear fender tail gate, plain finish (No Light Holes)
88102	59699-73	BT 1973-on Tail Light Hole
88103	59699-49	Fender tail gate BT 1947-54
88104	59699-39	Fender tail gate BT 1939-46
27104	59853-58	Hinge w/pin 1958-78
10186	59851-39	Hinge with pin 1939-48
10176	59820-30	Hinge Pin 1936-78 (ea)



Stand Catch 1936-57

Fits rigid 74 & 80 models. Original-style rear stand clip fitting FL 1941-57, EL 37-40, UL 38-48. Clip comes pre-drilled and ready for mounting. Replaces 49580-36.

Black	Chrome	Parkerized
3815	19272	27015

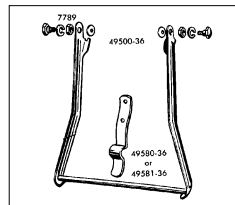

ADVISORY***

ALWAYS INSTALL FENDERS BEFORE PAINTING,
TO MAKE SURE OF FITMENT.

Rear Fenders



Chrome Rear Fender Support Braces

Steel 1/4" fender braces for 5" or 6" flat fenders or Fat Bob rear fenders when installed on rigid frames.

3009 For Fat Bob fender

Flat Rigid Fender Braces-Raw

Looks like PCP# 3009 from above, 1/4" steel with preformed bends for flat fenders.

PCP **Size**

27289 8"



6075

6073

Rear Fenders for Harley FX

Reproductions of the OEM FX 4-speed rear fenders 1973-84.

Use #406 (OEM 68008-73A) taillight #6073.

6073 Original style with light mount

6075 Custom bobbed



6084

Heavy Duty Flat Fenders

These fenders are rolled of 16 guage steel, available in 5", 6", 7" and 8" widths. The wide width of 7"-9" may require trimming for chain/belt relief. **Note:** the 5 & 6" fenders are 1- 1/4" deep and the 7" & 8" fenders are 1-7/8" deep,

PCP **Description**

6084 6" Plain

6085 5" Plain

88300 6" Plain Bobbed

88302 8.5" Plain

88303 9" Plain



28511



1232

Rear Bobbed Fender Light Brackets

Light brackets fit bobbed style rear fenders.

PCP **Application**

28511 1980-85 FXWG (59993-80TB)

1232 1982-03 FXE (wide bob 1 custom bracket)



FX-FXE Rear Stock Fender

Raw heavy steel fender fits 1971-72 FX models using stock struts. Stock style fender accepts early steel taillamp and 2 hole license plate bracket. Replaces 59584-72.

88056



"Wide Bob" Rear Fender for FX & FXE Models

"Bob" rear fender for that conversion to the FatBob look. Fits stock 4-speed FX frame and utilizes the stock fender struts.

6025 Fits 1973-85 FX's (except FXWG)

1232 Wide Bob taillight bracket

Rear Fenders




Fat Bob Rear Fender Kit for FXR Models

Fat Bob rear fender kit for all 1982-86 FXR models includes smooth, chromed steel fender struts that provide improved fender support over the stock parts. Accepts taillight kits with Fat Bob mounts, or the stock (OEM 59993-80) taillight bracket. This kit and its components are not compatible with original equipment or aftermarket sissy bars.

6024 Unpainted fender kit

Note: These fender struts are not designed for the standard original equipment fender, nor will this fender mount correctly to the standard fender struts.

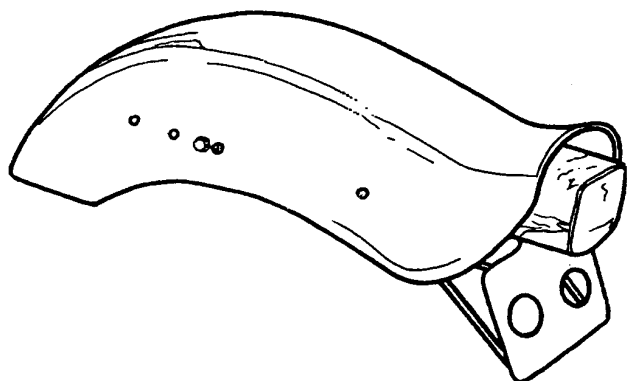

FXR Rear Bobtail Fender Kit 1982-94

Kit includes steel fender and a tail light bracket to accept the stock 1973-on tail light and mounts FXWG style as shown.

88008 Kit



Rear Bobbed Fender

- Smooth fender with cutout for chain relief like 1951-57 Rigid
- No skirt
- Fits EL 1936-40, FL 1941-57, UL 1938-47

88050



FXR Stock Rear Fender

PCP Application

88028 1982-on FXR-FXRS models (59634-81A)



Dresser Style Rear Fender

- 6.5" wide undrilled, smooth steel fender with bobbed end
- Uses either stock or smooth struts
- Mounts to FXR, FXD and XL models with a 6.5" wide fender
- Installation requires drilling of holes.

88030



Fat Bob Rear Fenders for FXWG & Softails®

Reproductions of the OEM pieces. Both fenders include the wire loom clips and necessary strut mounting holes as stock. They accept stock taillight assemblies as well as 'Cateye' and 'Lucas' taillights/brackets as found in Section 3.

Fenders

PCP Description
6006 Fits 1980-86 FXWG (59904-80)

Taillights and Brackets

28510 Black taillight bracket (59993-80)
28511 Chrome taillight bracket (59993-80TB)
406 Stock taillight assembly (68008-73A)
1231 Custom Fat Bob taillight bracket assembly


Rear Fenders



88036

EZ Bob XL Rear Fender Kit 1957-78

Kit includes a steel fender, cateye taillight, chrome bracket and chrome struts. Order sissy bar components separately.
88036

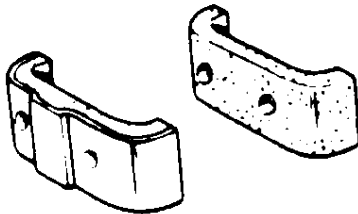

Rear Fender Bracket

Chrome bracket with foam buffer mounts to the frame tubes and stabilizes the front end of the rear fender. Helps to prevent cracking from vibration on 1952-78 Sportsters (OEM #59795-52A).

4193 Set



Custom FatBob Rear Fender

Original style universal and custom fenders. Fender measures 38" long, and 7" wide, we recommend using PC # 884 Cateye taillights with #6002 & #6004 fenders. All fenders are unpainted.

Left Chain Cutaway—For left side chain


6058 Without taillight mount

6002 With taillight mount

Right Chain Cutaway—Fits Sportsters in custom frames and bikes with the chain on the right side

6059 Without taillight mount

6004 With taillight mount

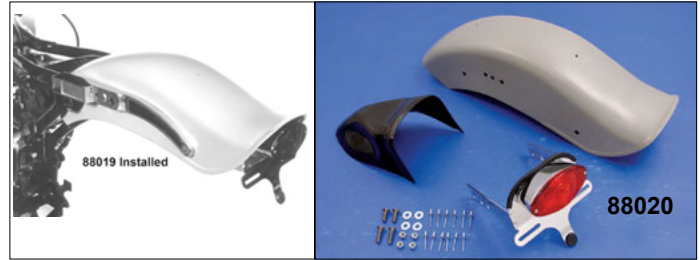

88020 Installed



E-Z Bob Rear Fender Kit for Sportster® 1979-on

Kit includes a steel fender and a Cateye taillight assembly with mounting bracket. This fender kit looks especially good when combined with the one-piece Sport Bob™ gas tank found in section 9. Order struts separately.

88037 Fender kit 1979-81

88020 Fender kit 1982-93

88019 Fender only 1982-93

6554 6079 6078 6077 6076



Rear Sportster Steel Fenders 1952-on

PCP Description

6076 Plain rear fender with light hole 1959-72 (59611-67A)

6077 Plain rear fender with no light hole XLCH 1952-78; XLH 1969-72.

6078 Plain rear fender with taillight mount 1973-78 (59674-73A)

6079 Plain rear replacement fender with taillight mount 1979-81, XL, XLCH, XLX & 1982-on XLS (59674-79A)

88238 As above (stock style)

6554 1982-93 (59674-81C)

Frames - Fenders - Tanks

We suggest pre-fitting all component parts including engine and transmission assemblies before painting or final assembly of a frame, fender or tank.

ADVISORY***
ALWAYS INSTALL FENDERS BEFORE PAINTING,
TO MAKE SURE OF FITMENT.

Rear Fender Struts



Internal Mounting Fender Struts

Custom fender struts for Harley 4 speeds 1955-on. All sets are pre-drilled with the correct mounting holes, then polished and chrome plated. Can be used to mount custom, reproduction or OEM fenders. Installation of FL or FXWG style struts on FX 4-speed models will permit mounting of wide FL tail gate or FXWG "bobbed" fenders.


- 4853** XL 1958-78 without signal holes
- 57405** XL 1973-78 with signal mount holes (59934-73)
- 57404** XL 1979-81 (52754-79, 52755-79)



Chrome Fender Strut Set

All sets are pre-drilled with the correct mounting holes. Installation of FL or FXWG style struts on FX 4-speed models will permit mounting of wide FL tail gate or FXWG "bobbed" fenders.

- 2913** FXE 1973-84 2 holes, not countersunk
- 57411** As above, with signal holes (59929-73)
- 2914** FL 1958-76 with 5 countersunk holes (59923-58)
- 57406** As above, 7 holes
- 57410** FL 1977-84 c/sunk holes & has rack mount holes
- 2915** FXWG 1980-85 5 holes, back hole is countersunk
- 57408** As above, less turn signal holes
- 3010** XL 1958-78

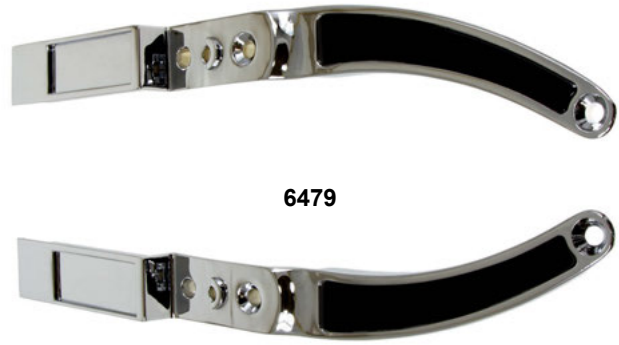

XL Chrome Rear Fender Supports

- 6479** 1982-89 Chrome (59950-81 & 59951-81) (pair)
- 24039** Allen bolt set for above struts



XL Chrome Strut Covers 1982-89

Chrome plated covers fit over existing shock struts.

- | PCP | Application |
|--------------|--------------------|
| 45224 | 1982-89 (59243-95) |




FXWG Bobbed Style Rear Fender Kits

These fender kits fit 1965-84 FLH and 1971-84 FX-FXE models. Includes steel fender, chrome struts, chrome taillight bracket and taillight.

- 88032** Stock style taillight 1965-84
- 88033** Cateye style taillight 1965-84

Rear Fender Struts

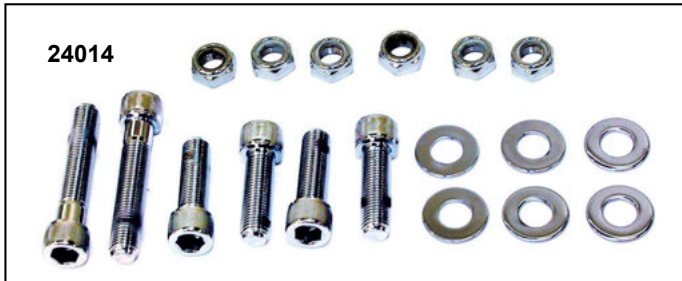


Chrome Allen Fender Strut Bolt Kits

Kits include allen head bolts, washers and nuts for mounting fender.

PCP Description

24013	FXWG 1980-85
24014	FX 1973-85
24015	FL 1958-78 without saddle bags and luggage rack
24016	XL 1957-78
24039	XL 1979-on

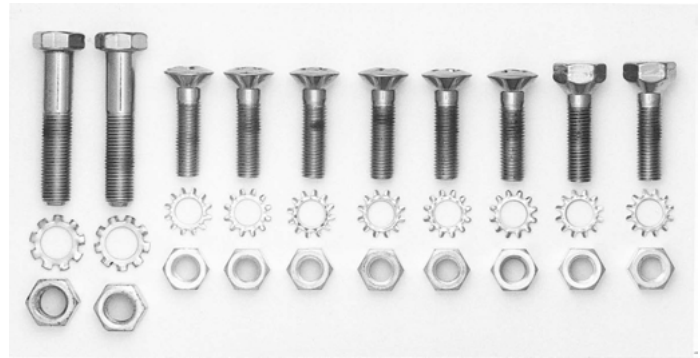

Chromed Rear Fender Support Mounting Kit

Duplicate of stock OEM hardware.

PCP Fitment

21504	FL, FLH, 1958-80
21505	K, XL 1952-58
21506	XL 1959-81

Custom Mounting Kits

1734	Acorn kit XL 1954-78, FX 1971-86
2899	Cap kit, as above
9638	Acorn, FLH 1958-80



XL Fender Rail Kit 1957-78

1734	Acorn
2899	Cap

Fender Trim



Early Fender Emblems

Sold as pairs, deluxe & OHV types. Nickel plated with stud & nuts attached to mount to saddle bags, fenders.

2111 Deluxe (11530-46)


2112 O.H.V. (91583-52)

12640 Speed nuts (10 pack) (7613A)

Fender Trim Fastening Clip

Replacement trim clips only. Replaces OEM #59225-39.

5548 1939-48 (25 pack)



Fender Side Rails

These Fender Side Rails come as a set with Hardware.

4347 FL 1949-56 (59205-49)

59062 FL 1957-73 (59205/6-57)

4350 FL 1967-on (59209-91T)

24036 "T" bolt kit (4 T-bolts, 4 lock washers, 4 nuts)



Eagle Fender Accents

Diecast fender ornaments are highly detailed and include mounting bolts and gaskets.

Small 6-3/4" L x 1-1/2" W x 2" H

40300 Chrome



Diecast Fender Skull Ornaments

Top quality fender trim with or without illuminated eyes. They are offered in all chrome or a chrome and gold inlay. Definitely something different to set your bike apart.

40312 Chrome with illuminated eyes


40313 Chrome with gold inlay and illuminated eyes



Front Fender Lamp with Clear Lense 1949-on

19393 68450-49

Fender Trim

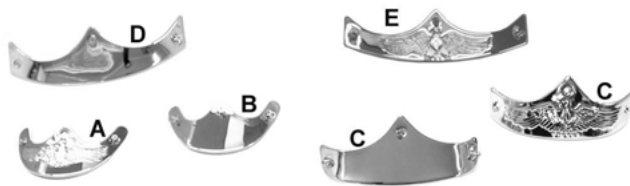

Chrome or Brass Fender Tips

Beautifully crafted fender tips in chrome or polished brass, with eagle or no eagle.

Fits fender width as noted.


PCP #	Style	Width	Type
59344	A Eagle	4"	FXWG
56222	B Smooth	4"	As above
59345	C Smooth	5"	FX
2187	C Eagle	5"	FX
2186	As above in polished brass		
56220	D Smooth	7"	1936-57 BT
2185	E Eagle	7"	1937-57 BT
2184	As above in polished brass		



Stainless Fender Trim Set 1949-56 OHV

A complete set of fender trim and fittings duplicating the original 1949 thru 1956 factory styling. Can be used for restoration, or to bring a classic look to any FL style front fender from 1949-up. Set includes 2 front fender side trim spears, front fender lower trim, and front fender tip.


PCP	Description
3118	Complete trim set (pictured)
16219	Lower rear trim only (59207-49)
4347	Front trim spear set only (59205-49)
4346	Front tip only (59215-49)

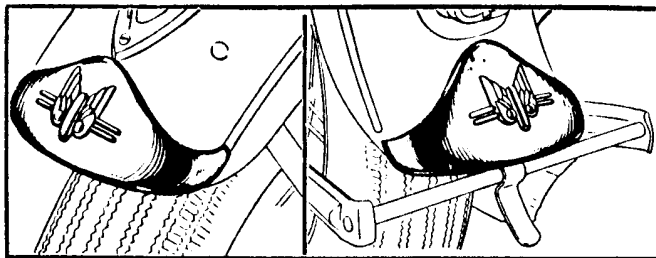

Early Fender Tips

Embossed Eagle Type fits 1935-48 fenders—replaces Front 3724-48B, Rear 3724-48A.

4343	Front 1935-48
4344	Rear 1935-46

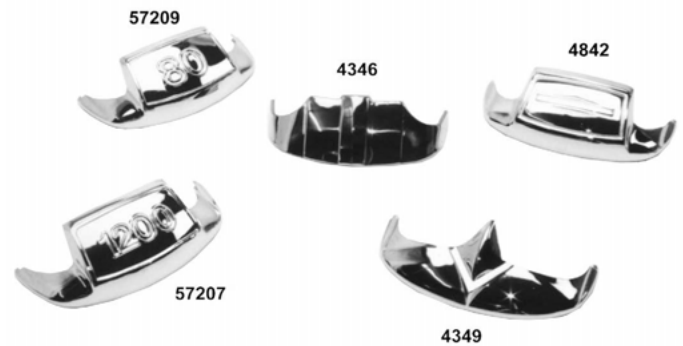

Fender Tips

Made of die cast aluminum and chrome plated.

PCP	OEM	Style	Type
4842	59216-59A	Shield 67-72	Front
4843	59887-59A	Shield 67-72	Rear
57207	59216-59B	1200 78-79	Front
57208	59887-59B	1200 78-79	Rear
57209	59216-78	80" 78-on	Front
57210	59887-78	80" 78-on	Rear
4346*	59215-49	Classic 49-56	Front
4349	59216-59A	Spear 59-66	Front
4348	59887-59A	Spear 59-66	Rear

*Note: Stainless Steel



Chrome Front Lower Fender Trim

Chrome plated with a smooth finish and fits all FLH.

4845 FL/T/HT/HS 1958-85 (59233-76)




Lower Ribbed Front Fender Trim 1949-85

Chrome ribbed lower fender trim is shaped to match the stock front fender.

4844 2 1/2" high (59233-68)

Fender Trim

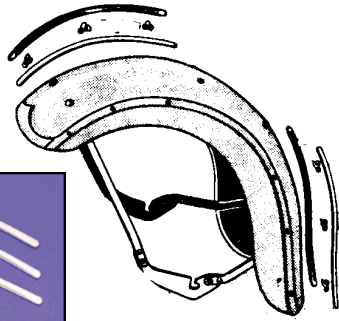

Springer Front Fender

Stainless steel fender trim set. Replaces OEM #59200-39. Fits all 1939-48 all models. Complete with clips. USA

4501 Kit



Rigid Rear Fender Stripe Set

1949-57

19348



Stainless Steel Fender Trim Set

Includes 2 each of 9" and 10" strips for the top of all 7-1/4" wide rigid, swingarm, or bobbed rear fenders. T-bolts and template provided to ease installation.


27158



Rear Fender Sargent Stripes

6 Piece set in stainless steel with attachment clips. Fits FL 1949-84 rigid fenders.


59061

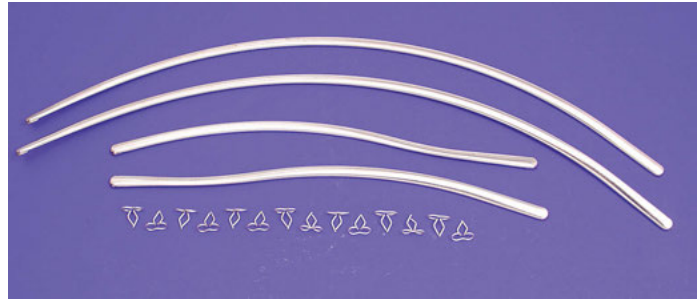

Rear Fender Trim-USA

Stainless steel fender trim set. Replaces OEM #53900-39. Fits all 1939-48 all models. Complete with clips.

4505 BT 1939-48

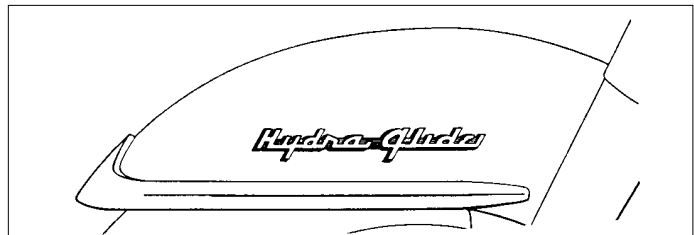

Front Fender Emblem Sets

1236 Hydra-glide (91582-50)

Duo-Glide Emblems

Aluminum (not chromed)

1622 Pair (59195-58)



Glide Fender Nameplate

Chrome nameplate replaces 59196-65 on 1965-on FL-FLH.

2113 Pair



Chrome Steel Lower Fender Trim Rail

Includes 2 stanchions and 1 ball in the center. 1/4x20" Threads mount studs. Fits 1949-on FL.

57220

Fender Trim



3205



1219



29631



23027




54503

Fender Trim Rails


Chrome plated for FLH models, front glide type 1949-up drum and single disc models, and rear for 1958-84

PCP Application

- 1219** Front 1949-84 (91075-58)
12638 Front "T" bolt (91091-61) (5 pack)
12639 Front mount kit 1949-84
3205 Rear 1958-84 (91007-58)

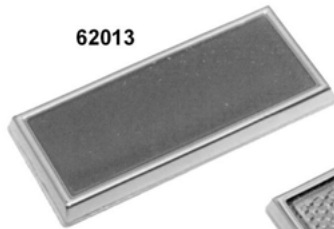

62013

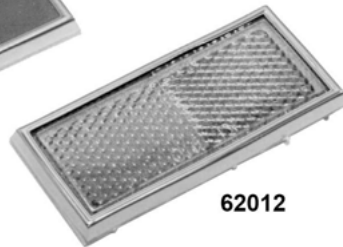

62012

Reflectors

Adhesive Backed OEM type, DOT approved

- | PCP | Colour | Type | Fits |
|--------------|--------|----------|--|
| 62012 | Amber | Pin | Front fender 1972-84 FL (59254-72) (pair) |
| 62013 | Red | Adhesive | Rear fender 1972-on FX, 1972-84 FL (59255-72) (pair) |
| 62020 | Red | Adhesive | Rear taillight bracket (59988-72) (each) |



Front and Rear Bumpers

Bumpers feature rubber inserts as OEM.

- | PCP | OEM | Description |
|--------------|-----------|-------------------------------|
| 54503 | 91075-68B | Front FLH 1968-84, V-Twin |
| 29630 | 91085-83C | Front FLT 1983-06 |
| 29631 | 91107-77A | Front rubber insert 1977-on |
| 23027 | 91123-77 | Rear rubber insert 1968-on |
| 12636 | 8126A | Reflector speed nut (10 pack) |
| 12637 | | Mount bolts 1968-84 |



Front Fender Rail Light Kit

Increase your visibility using our 12 volt amber running lights that mount to the front fender rail on FL and FLT models 1973-on. Installation is quick and easy, just wire the kit to the stock fender tip light. Sold in pairs.

28305



57100



57101

"Skull" Fender Mudflaps

Both mudflaps are black with a white imprinted skull emblem that has red reflector eyes. Both measure 6 1/2" wide at the 3 fender mount holes (hardware included).

- 57100** Large size (bottom 10 1/4" wide by 8" high)
57101 Small size (bottom 9 1/2" wide by 6 1/2" high)

Luggage Racks



Chrome Three Rail Luggage Rack

This chrome luggage rack measuring 11-3/4" L x 8-1/2" W was designed to fit Sport Dressers equipped with frame or spring mounted solo seat.

Note: FLSTF models require turn signal relocation.

54703 1958-84 FL models (53403-58D)

54700



54701



Chrome Rear Fender Luggage Racks

Available to fit a variety of models, these new luggage racks are easy to install and remove. Triple chrome plated and made out of 3/8 steel tubing. Mounts to stock seat bracket and license plate bracket.

54700 1979-03 all XL (8" L x 6" W)

54701 1982-94 all FXR, 1976-85 FXE (9-1/2" L x 6" W)


Note: The cargo capacity of these racks is limited to ten pounds or less.



Luggage Rack Buddy Seat (12 3/4" x 9")

A quick-detach seat for the convenience of solo riders who sometimes want to carry a passenger. Designed to latch on to the early-style 3-channel chrome luggage carrier fitted to FL models, 1958-82. Covered in black naugahyde.

3017 Sold each

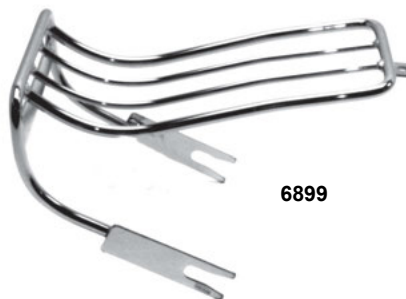

6899

Chrome Luggage Racks FXWG, FXST

Luggage racks fit FXWG, FXST, FXSTC and FXSTS models as well as any other Big Twin models which have been converted to a Fat Bob rear fender and many swing arm frames fitted with a bobbed rear fender.

6899 1980-99 Bobtail luggage rack (56466-86A)



54723

Vintage Style Luggage Rack

Retro 5 bar styling to fit 1936-40 EL and 1941-57 FL rear fenders. No interference with post mounted buddy or police solo seat. Max load 10 pounds.

PCP Type

3215 Chrome

54723 Black, import


54741 Black, Paughco USA



3215



54705

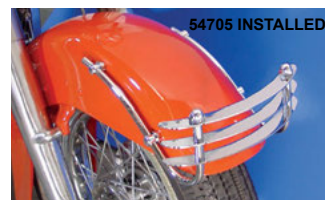

54705 INSTALLED



54706



54707

Front & Rear Bumpers (Cabbage Cutter Style)

Reproductions of the late 1940's fender trim.

PCP	OEM	Design	Model
54705	91075-55	Front with grill	Glides
54706	91007-52	Rear with grill	Rigid
54707	91007-48	Rear w/o grill	Rigid
24046	91083-49	Chrome eye bolt set	